

**Notes for Tiling and Sealing**


- Prior to installation check that all parts have been supplied.
- Assemble bath on a mat to protect against damage to bath surface.
- Bath diagram shown is for reference only and bath legs fit to all baths.
- This product requires a two person lift - use proper lifting techniques.
- This installation guide does not include details of waste connection; final decision about installation of waste connection should be taken by a suitably qualified person.
- All tiling, grouting and sealing must be completed before the bath screen is fitted to the wall

**Tip -To produce a clean perfect silicone sealant line**


The area must be dust free and cleaned with a degreaser such as methylated spirits to ensure good adhesion of the silicone. Use waterproof mould resistant bathroom silicone sealant (not acrylic it does not adhere as well)

Mask with making tape both sides of the joint leaving a reasonable space for the silicone to fill. Apply the silicone sealant, then you can wipe the silicone back and forth with your finger, forcing the sealant into the small gaps and crevices as you go. Ensure the silicone is thin where it meets the masking tape.


Then remove the making tape to reveal a perfect line that provides a perfect seal. (It works every time!)

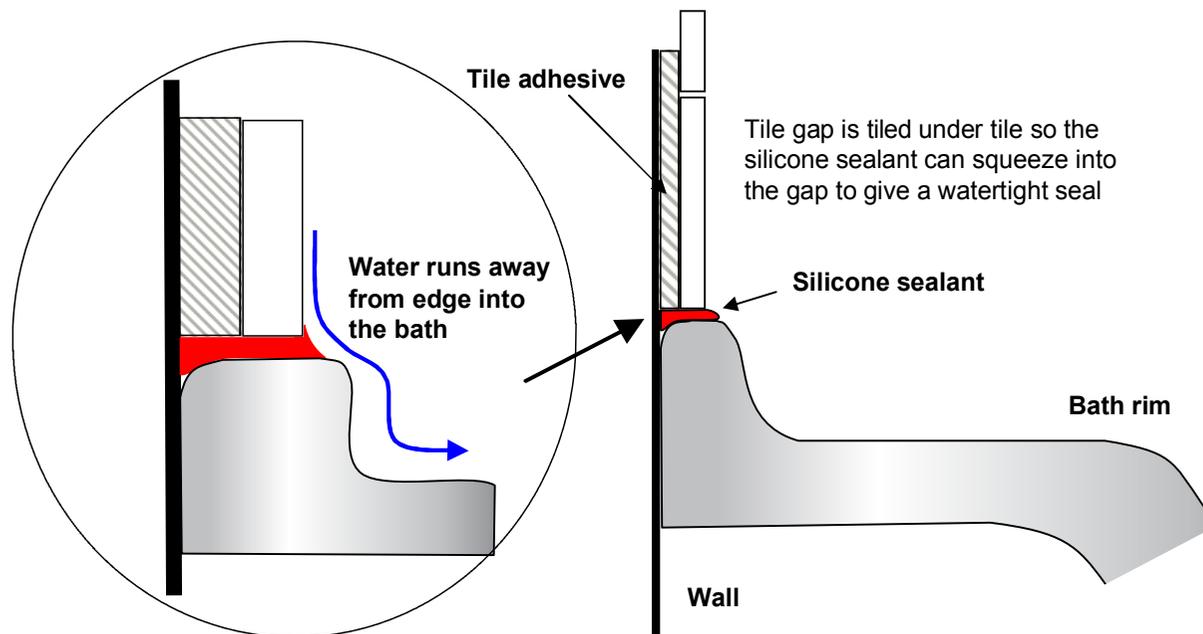

**Tiling the wall above the bath** Plan the tiling to end neatly on top of the upstand

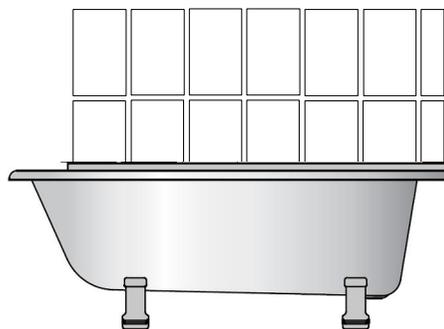

**Tiling the whole wall** Plan the tiling by offering the bath into position ensure the levels are as required. Then move the bath away for tiling.

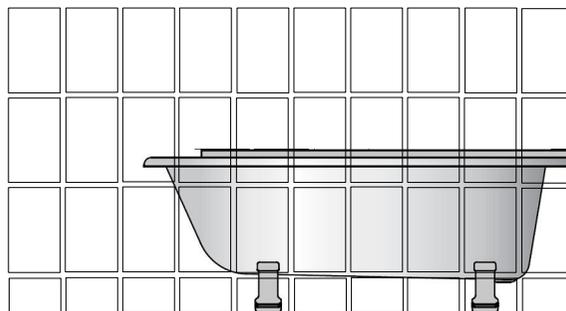

Tiles are cut to provide slot for bath to fit into. The cut in the last tile will need to be shaped to accept the corner detail of the bath rim.

